




www.fliegenworks.com

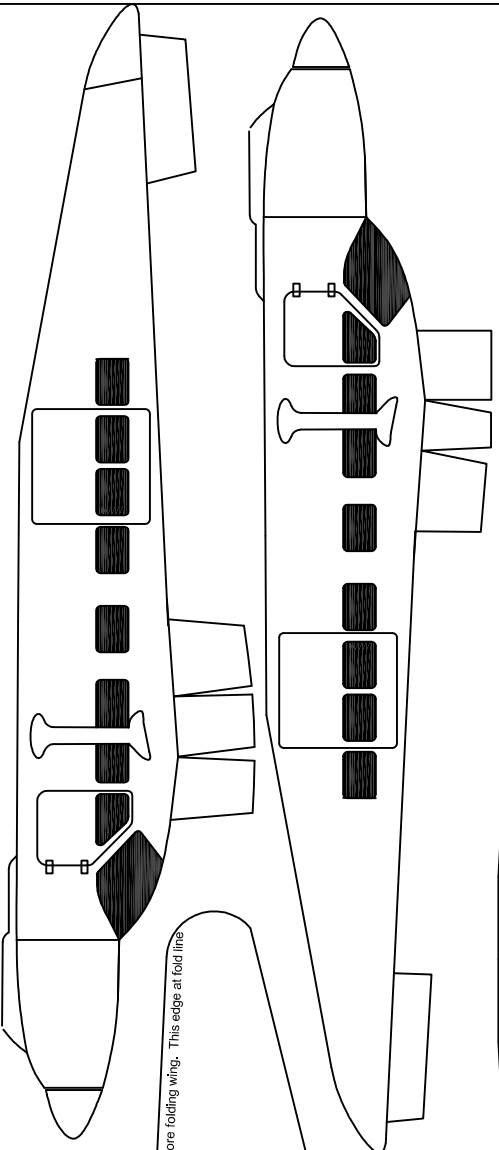



7. Glue this to bottom of wing before folding wing. This edge at fold line

After attaching the front parts, put about 6 staples in the nose as far forward as possible. Then, glue this assembly between the two fuselages - don't glue on the tabs!

3. Glue these two to the sides of the unmarked fuselage

2. Glue these two to the sides of the unmarked fuselage

Put staples here

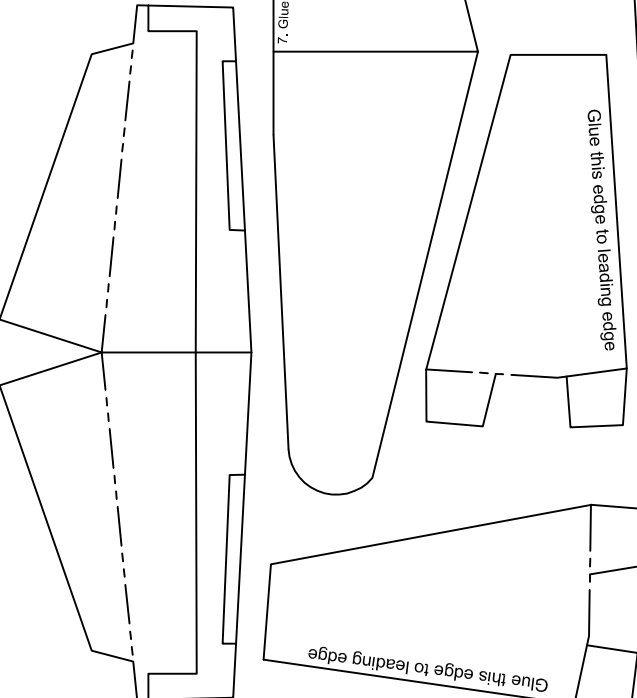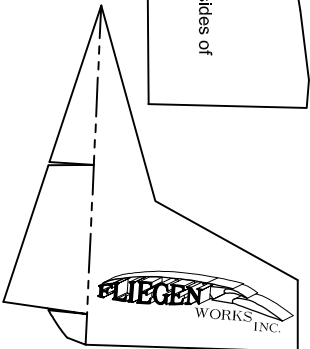

Glue this edge to leading edge

Glue this edge to leading edge

Instructions

1. Cut out all parts.
2. Glue short nose pieces to unmarked fuselage
3. Glue next nose pieces on top of those.
4. Add about 8 staples to the fuselage assembly
5. Glue the outside fuselages to the center assembly. Make sure you do not glue the tabs for the wing or tail..
6. Fold the wing at the leading edge.
7. Glue the large wing reinforcement to the bottom of the wing at the leading edge. While the glue is still wet, put a slight camber in the wing by rolling the lower surface over the edge of a table. Only put a curve on the front 1/3 of the wing. Make sure both wings have the same curve.
8. Glue the leading edge of the wing over the first reinforcement.
9. Glue the wing to the tabs on the fuselage.
10. Glue the small wing reinforcements to the tabs and bottom of wing.
11. Fold and glue the tail. Then glue the tail to the tabs on the fuselage.
12. Fold the center part of rudder and glue the rudder to the fuselage and horizontal stabilizer.
13. Allow to dry, then check the balance. The plane should balance between the first 1/4 of the wing and the middle of the wing. Add staples to balance.

Fliegen Works Inc.
921 SE 47th Ave
Portland, OR 97215

503 221-4001 office
503 262-7476 fax
www.fliegenworks.com